



Hydrogen Water Purifier APH

INSTALLATION GUIDELINE

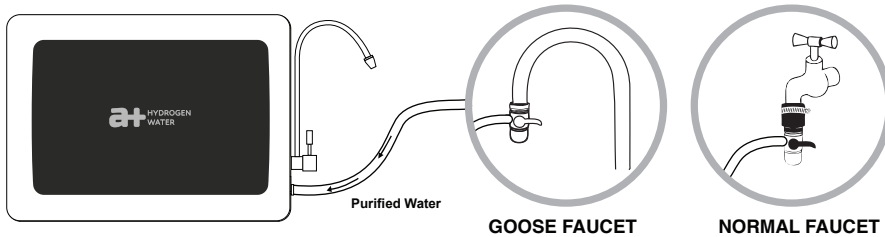

GOOSE FAUCET INSTALLATION


(Single Way Diverter Valve)

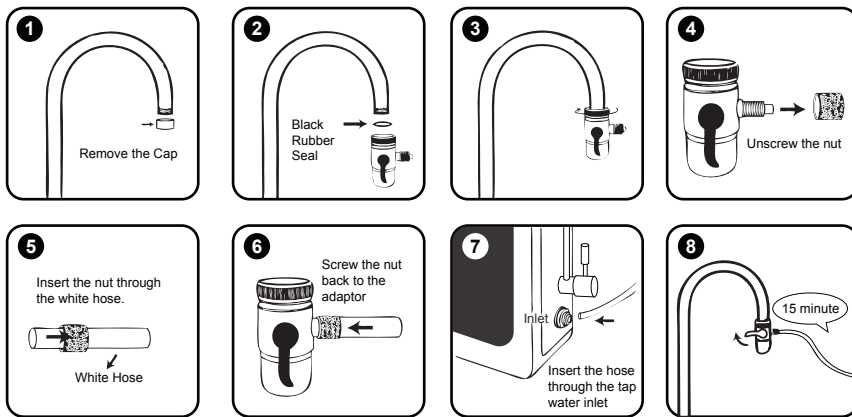

Run a water flow test about 15 minute and your water purifier system are ready to use.


NORMAL FAUCET INSTALLATION

(Single Way Diverter Valve)

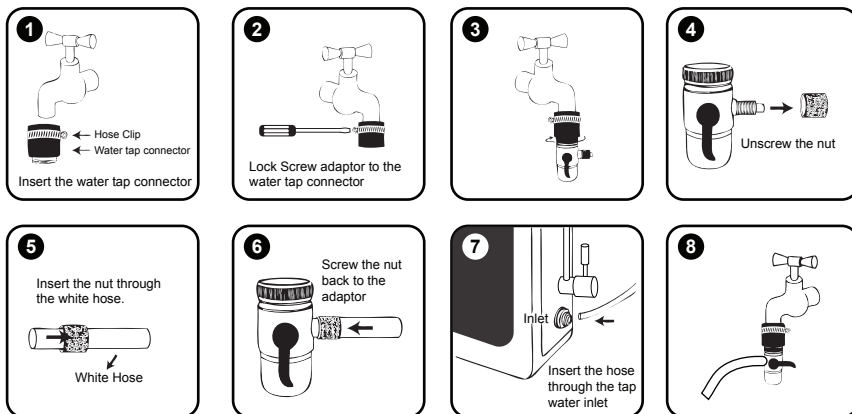

Run a water flow test about 15 minute and your water purifier system are ready to use.

FILTER REPLACING

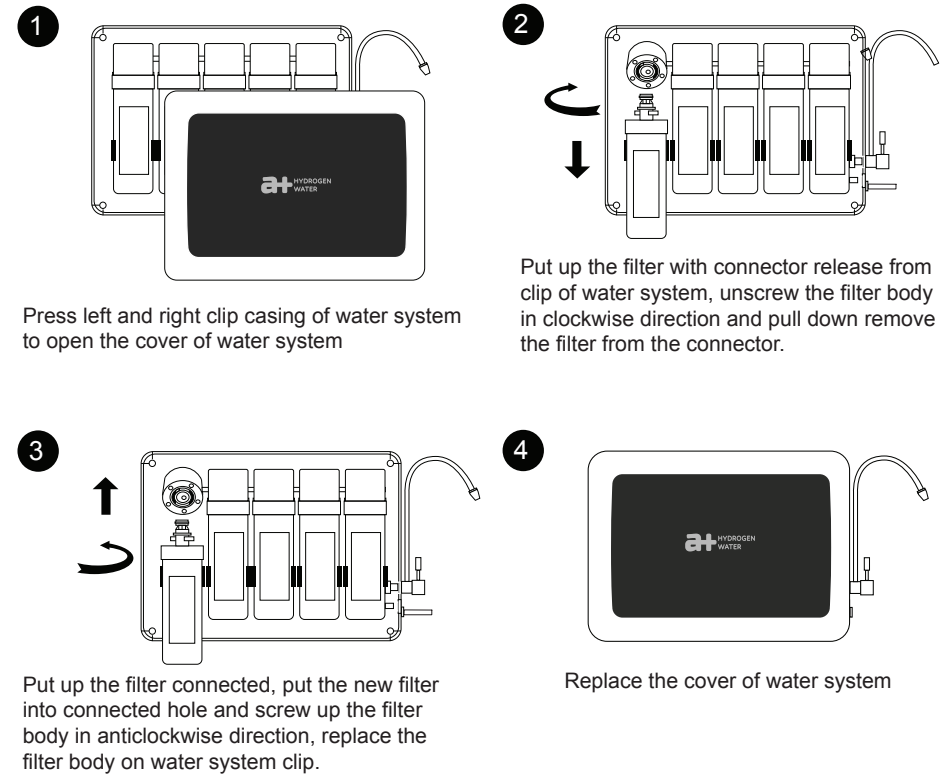


FILTERS CARTRIDGES LIFE SPAN

Filter A	PP Sediment	Approx 6 months
Filter B	Pre-Carbon	Approx 6 months
Filter C	UF Membrane	Approx 18 months
Filter D	Hydrogen	Approx 18 months
Filter E	Carbon Block	Approx 12 months

Caution


Do not use on water which is microbiologically unsafe or of unknown quality.

HYDROGEN WATER PURIFIER APH

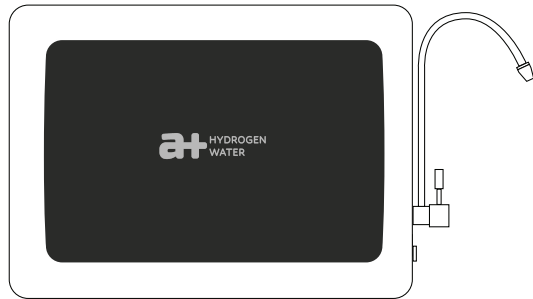

at A PLUS
HEALTHCARE

USER MANUAL

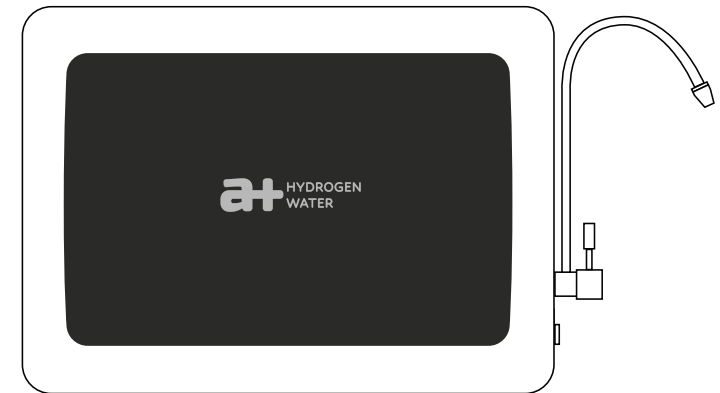

Model No.:	APH-5F01
Dimension (D x W X H):	120 x 400 x 315 (mm)
Weight (fill with water):	5,6kg
Watering System:	Direct drinking water system
Filter Steps:	5 stages filtration with 5 filters
Filter Replacement	Easy to operate and filter replacement
Power Consumption:	Non-electrical



NO Electricity



NO water discharge



Safe Materials



Direct Drinking

HYDROGEN WATER PURIFIER APH
(MODEL APH-5F01)

PRODUCT DISTRIBUTED BY

Company : A PLUS HEALTHCARE TRADING SERVICE COMPANY LIMITED

Address : 90 BEN VAN DON, WARD 9, DISTRICT 4,
HO CHI MINH CITY, VIETNAM.

Contact : 0909728793

Email : infoaphvn@gmail.com

Website : www.aplushealthcare.vn



Made in Malaysia